



**DSX Access Systems, Inc.**

## **DSX Enrollment Reader**



- **USB Connected**
- **125KHz or 13.5MHz Versions**
- **Formatted for DSX**
- **Inserts Card Number in Code field**
- **Allows for quick and consistent entry of card numbers**
- **LED flashes and beeps when card is read**

## **DSX Enrollment Reader**

### **Size**

4.2"W x 2.5"H x .875"D

### **Weight**

.45lbs

### **Power Requirements**

USB

### **Warranty**

Limited 1 Year

### **Frequency**

13.56 MHZ -or- 125KHz

Dual Frequency is available

### **Compliance**

FCC, RoHS

### **Enrollment Reader**

This USB reader is preprogrammed by DSX to properly read the card number and insert the proper data into the DSX database.

### **Requirements**

Connect the USB enrollment reader to an available USB port on the PC that will be entering the card numbers in to the DSX software.

### **Enrollment Process**

Add or Edit a card holder. Advance to the Card screen and click on the Code field.

Once the cursor is in the Code field – Present the Card to the Reader.

The screenshot shows a software window titled "New Cardholder New Card". It has three tabs: "Cards", "Access Level", and "Linking Level". The "Cards" tab is selected. The window contains several input fields and controls:

- Code #:** A dropdown menu with "0" selected.
- P.I.N. #:** An empty text field.
- Imprinted Card #:** An empty text field.
- # of Uses Allowed:** A text field containing "9999".
- Start Date:** A date picker showing "09/28/2010".
- Stop Date:** A date picker showing "12/31/9999".
- Start Time:** A time picker showing "12:00:00 AM".
- Stop Time:** A time picker showing "12:00:00 AM".
- Guard Tour:** A checkbox that is unchecked.
- Override Anti-Passback:** A checkbox that is unchecked.
- Status:** A checkbox that is checked.
- Date Last Used:** A text field containing "01/01/1000".
- Anti-PassBack Status:** Four buttons labeled "N", "N", "N", "N".
- Last Used At:** A text field containing "Loc: 1 0".
- Notes:** A large empty text area.
- Navigation:** Buttons for "Previous", "Next", "Cancel", and "OK" at the bottom.

Once the Card is presented and the number is displayed in the Code Field Click OK to Save.